

**SIMPSON****Strong-Tie**

# Fastening pattern



REV

0

REV DATE

29/08/24

DWG NAME

C\_SBE320\_2D0\_NP\_JTRS-UK

Item

=

SBE320

Fasteners

=



Timber to rigid support

Joist to beam



Type of fastening




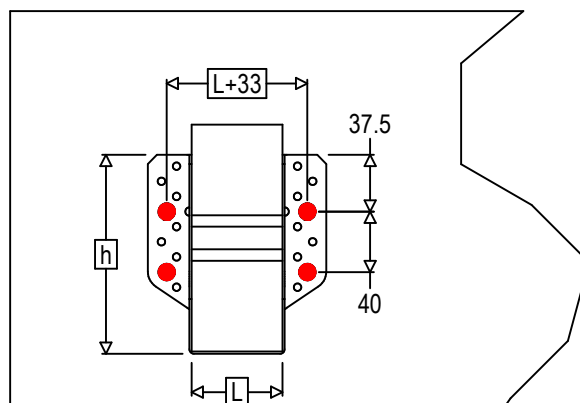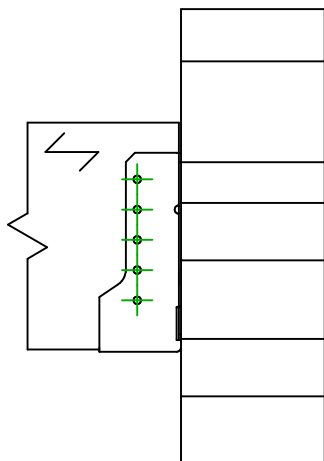





=

Fixing on rigid support

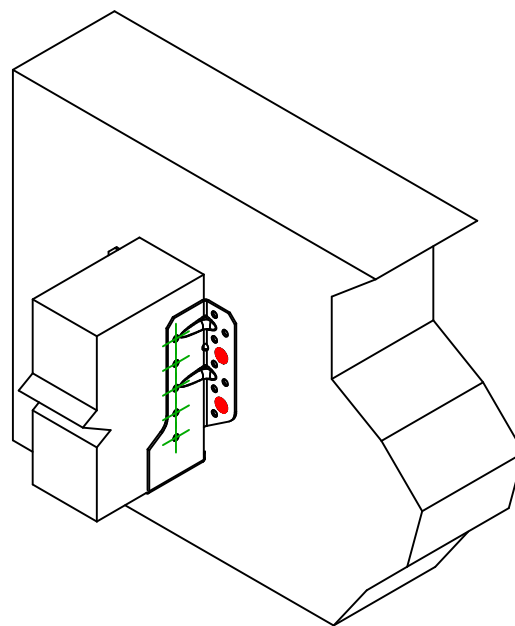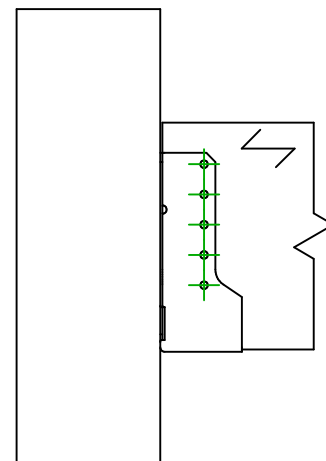

$$h = (320 - L) / 2$$



Header Fastener(s)	Symbol	Fasteners	Fasteners		Qty
		FM753 	FM 753 EVO M10X78/5		4
		LMAS 	LMASM10		
		THD 	THD08070		
Joist Fastener(s)	Symbol	Fasteners	L < 64mm	L > 64mm	Qty
		CNA  	CNA4.0X35	CNA4.0X50	10
		CSA  	CSA5.0X35	CSA5.0X40	