

**SIMPSON****Strong-Tie**

# Bevestigingspatroon



REV

0

REV DATE

26/07/24

DWG NAME

C\_SAE200\_2D0\_NP\_JTB-FN-NL

Art. Nr.

=

SAE200

Bevestigingsmiddelen

=




Hout op hout

Balk op draagbalk


Type bevestiging






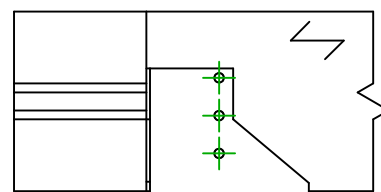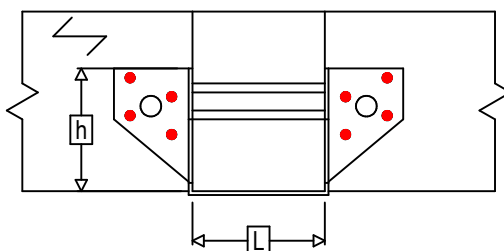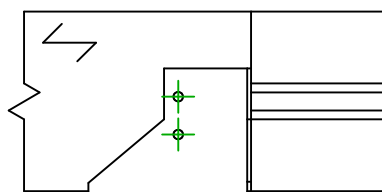




=

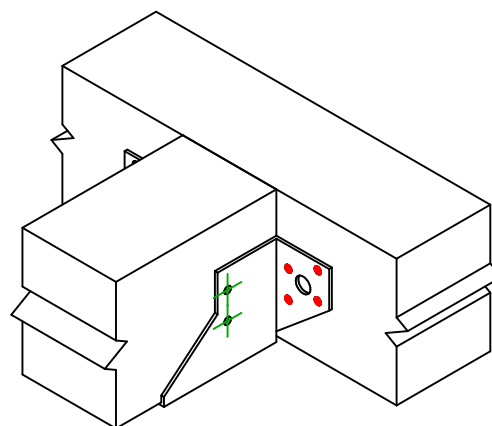Volledige vernageling



$$h = (200 - L) / 2$$



Draagbalk Bevestigingen	Symbol	Bevestigingsmiddelen	Bevestigingsmiddelen		Aantal
		CNA  	CNA4.0X35 / CNA4.0X50		8
		CSA  	CSA5.0X35 / CSA5.0X40		
		-	-		
Balk bevestiging(en)	Symbol	Bevestigingsmiddelen	L < 64mm	L > 64mm	Aantal
		CNA  	CNA4.0X35	CNA4.0X50	5
		CSA  	CSA5.0X35	CSA5.0X40	