

**SIMPSON**

**Strong-Tie**

# Fastening pattern



REV

0

REV DATE

26/07/24

DWG NAME

C\_SAE250\_2D0\_NP\_JTB-FN-UK

Item

=

SAE250

Fasteners

=




Timber to timber

Joist to beam


Type of fastening








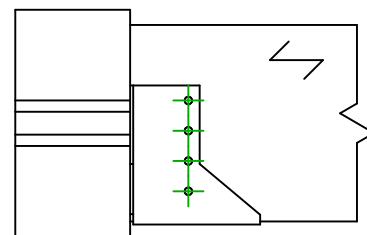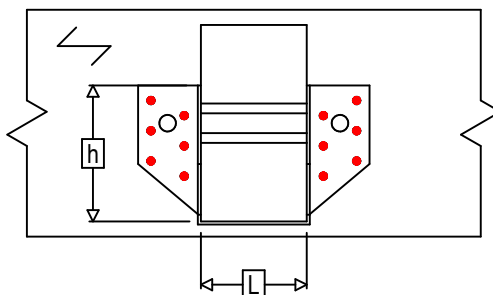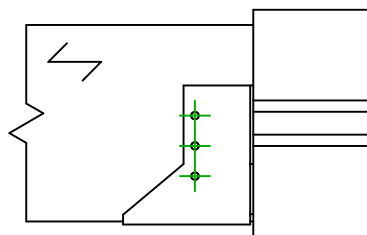


=

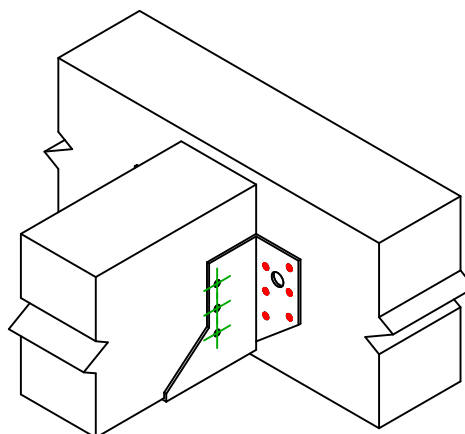Full nailing



$$h = (250 - L) / 2$$



Header Fastener(s)	Symbol	Fasteners	Fasteners		Qty
		CNA  	CNA4.0X35 / CNA4.0X50		12
		CSA  	CSA5.0X35 / CSA5.0X40		
		-	-		
Joist Fastener(s)	Symbol	Fasteners	L < 64mm	L > 64mm	Qty
		CNA  	CNA4.0X35	CNA4.0X50	7
		CSA  	CSA5.0X35	CSA5.0X40	